

# iSOC<sup>®</sup> Technology

## Directions for Clamping iSOC<sup>®</sup> Barb and Tubing Connections


### **Distribution header clamp:**



iSOC<sup>®</sup> distribution header with nylon collar and s.s hose clamp. **NOTE: Do not remove barb fitting from valve.**



**Step 1:** Slide nylon collar with s.s hose clamp over end of on site tubing BEFORE attaching tubing to barb. Push tubing over barb fitting so that tubing covers entire barb.

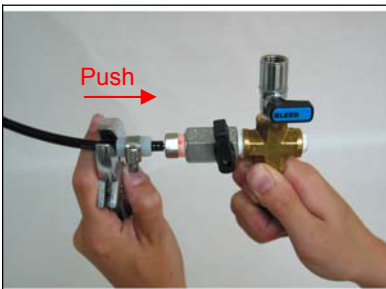

**Step 2:** Push nylon collar back down over tubing and barb until flush with hex plug. Do this using a wrench to push down on collar shoulder.

### **iSOC<sup>®</sup> clamp:**



iSOC<sup>®</sup> with black plastic hose clamp. **NOTE: Do not remove barb fittings from filter.**



**Step 1:** Start black plastic clamp around tubing covering iSOC<sup>®</sup> using fingers. Be sure to properly align clamp before doing so.



**Step 2:** Center clamp in middle of barb and tighten remainder of way using a pair of needle nosed pliers.